

P-2302HW/HWL-P1


802.11b/g Wireless VoIP Station Gateway

Quick Start Guide

Version 3.60
Edition 1
8/2006

The logo for ZyXEL, featuring the word "ZyXEL" in a bold, blue, sans-serif font. The "Zy" is in a smaller font size than "XEL", and the "X" is significantly larger and more prominent.

1 Connect the Hardware

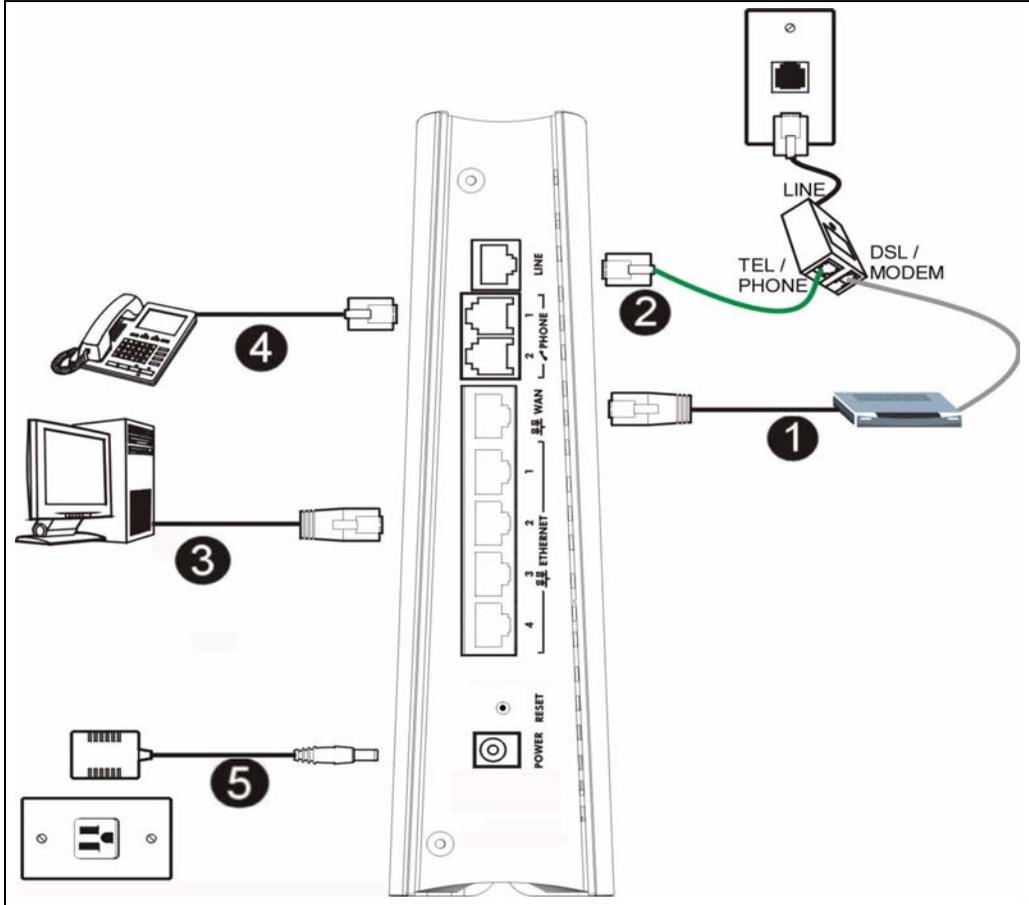

1 WAN: Use an Ethernet cable to connect the DSL modem to this port.

2 LINE (P-2302HWL models only): Use the green PSTN line cable to connect the **TEL** or **PHONE** jack on a splitter to this port. If no splitter is provided connect the the telephone jack to this port.

Note: When the P-2302HWL-P1 does not have power, only the phone connected to the **PHONE 1** port can be used for making calls. Ensure you know which phone this is, so that in case of emergency you can make outgoing calls.


3 ETHERNET: Use an Ethernet cable to connect a computer to this port for initial configuration and/or Internet access.

4 PHONE 1-2: Use telephone cables (and any telephone adaptors provided with your P-2302HW/HWL-P1) to connect your telephones to these ports. If you only have one telephone, you should use port 1.

5 POWER: Use the power adaptor provided with your P-2302HW/HWL-P1 to connect an appropriate power source to this socket.

1.1 LEDs (Lights)

- The **POWER** light blinks during start-up and is green once the P-2302HWL-P1 is ready.
- Each **ETHERNET** light turns on if the corresponding **ETHERNET** port is properly connected. The lights blink when the P-2302HWL-P1 is sending or receiving data through the corresponding **ETHERNET** port.
- The **WAN** light stays on if a physical connection with your DSL modem exists. The **INTERNET** light stays on when Internet access is available.
- The **PHONE** lights stay on when your SIP account is registered and they blink if the receiver is off the hook.
- The **WLAN** light turns on when the wireless LAN is ready. It blinks when the P-2302HWL-P1 is sending/receiving data through the wireless LAN.

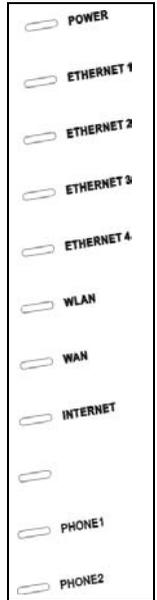

If none of the LEDs are on, turn the device off and recheck your hardware connections.

2 Initial Configuration

1 Open your browser, and go to <http://192.168.1.1>.




2 Enter the password **1234**. Then, click **Login**.



3 Follow the directions in this screen.



4 Click **Go to Wizard setup.**

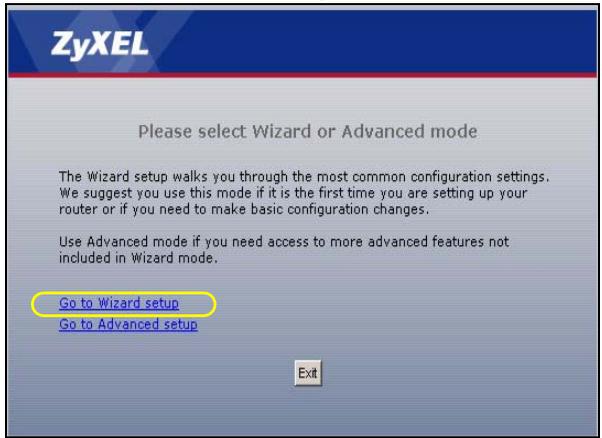

2.1 Connection Wizard

The connection wizard helps you set up your Internet connection as well as your wireless settings. Click **CONNECTION WIZARD**.

Note: Enter the Internet access information exactly as given to you by your ISP in each wizard screen and then click **Next** to continue or click **Back** to return to the previous screen.

Current screen information will be lost if you click **Back**.



STEP 1: System Information

This screen is optional. You can just click **Next**.

- **System Name** is for identifying the P-2302HW/HWL-P1. You can enter your computer's "Computer Name".
- If you leave the **Domain Name** blank, the domain name obtained by DHCP from the ISP is used.

STEP 1 → STEP 2 → STEP 3

System Information

System Name

Enter a name to help you identify your router on the network. This information is optional and you may safely leave this field blank.

System Name: P2302HWLP1

Domain Name

The ISP's domain name is often sent automatically by the ISP to the router. If you are having difficulty accessing ISP services, you may need to enter the Domain Name manually in the field below. This field is normally left blank.

Domain Name: Zyxel.com

<Back Next > Exit

STEP 2: Wireless LAN

A Select **None** for your initial wireless security.

B Select **No** in the **Do you want to enable OTIST ?** radio button.

STEP 1 → STEP 2 → STEP 3

WIRELESS LAN

WIRELESS LAN

The SSID is the name given to your wireless network. It may be possible to see multiple wireless networks from your home or office, so choose a name that you will be able to recognize later.

Name(SSID) ZyXEL

Channel Selection Channel 06 Scan

Security None **A**

<Back Next > Exit

STEP 1 → STEP 2 → STEP 3

WIRELESS LAN

OTIST

You previously had "No Security" security enabled on your wireless LAN.

OTIST will automatically configure the SSID and security settings on both your router and your wireless clients. In order for this to work, you must be using ZyXEL ZyAIR client adapters that support OTIST.

The OTIST configuration process may take up to 3 minutes.

Please type in a unique setup key. This key acts like a password to ensure only those wireless LAN devices you authorize are configured by OTIST. You will need to remember this key to setup new devices via OTIST.

Do you want to enable OTIST ? Yes No **B**

Setup Key 01234567

<Back Next > Exit

Note: These settings allow you to access the wireless network without setting up any security on your wireless client. This means that any wireless device within range of your P-2302HW/HWL-P1 can access your wireless network.

If you know the security settings you want to set up you can also enter them in these screens. If you want to set up OTIST, see the following section. Refer to your User's Guide for more information on setting up your wireless network.

OTIST

ZyXEL's One-Touch Intelligent Security Technology (OTIST) feature allows you to automatically configure the SSID and WPA-PSK on all OTIST-equipped wireless clients within range of the P-2302HW/HWL-P1.

Note: If you enable OTIST but select **Disable wireless security** using the wireless wizard, the P-2302HW/HWL-P1 will create a WPA-PSK automatically.

If you enable OTIST and select **Manually assign a WEP key** using the wireless wizard, the P-2302HW/HWL-P1 will replace the WEP key with a WPA-PSK.

Enable OTIST only if your wireless clients support WPA and OTIST.

You must enable OTIST on the P-2302HW/HWL-P1 and all wireless clients within three minutes in any order.

To enable OTIST on wireless clients, click **Start** in the **Adapter** screen. The **Setup Key** is 01234567 by default. If you have previously saved a setup key on the P-2302HW/HWL-P1, use it instead of the default.

STEP 3: WAN

Select one connection type from the drop-down list box. Check with your ISP to make sure you use the correct type:

- 1 Ethernet
- 2 PPPoE



Note: If you were given Internet access settings, enter them in the following fields. Otherwise leave the default settings and just click **Next**.

Ethernet Connection

A Select **Ethernet** as your WAN connection type.

B Select **Get automatically from your ISP** if your ISP did not assign you a fixed IP address. Skip to **C**.

Or






Select **Use fixed IP address provided by your ISP** to give the P-2302HW/HWL-P1 a fixed, unique IP address. Go to **B1**.

B1 If you select **Use fixed IP address provided by your ISP**, enter a WAN IP address, WAN IP Subnet Mask and the neighboring device's IP address given by your ISP.

If you were given DNS server settings, enter them in the fields. Otherwise leave the default settings and just click **Next**.

C Select **Factory Default** to use the factory assigned default MAC address. Click **Apply** to save your changes. The OTIST in Progress screen appears if you enable OTIST in the previous wizard screen. Wait for the P-2302HW/HWL-P1 to finish transferring OTIST settings.

D Click **Finish** to complete the wizard.

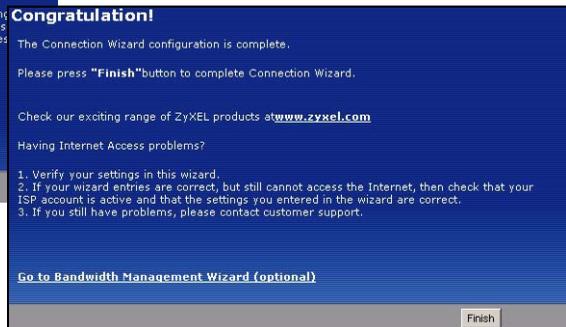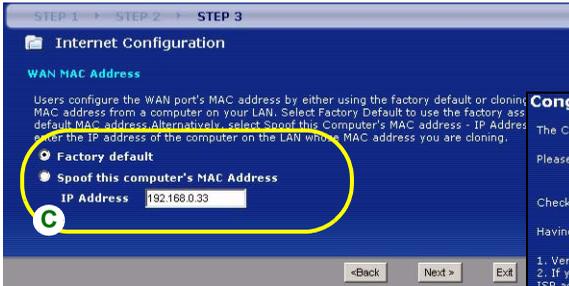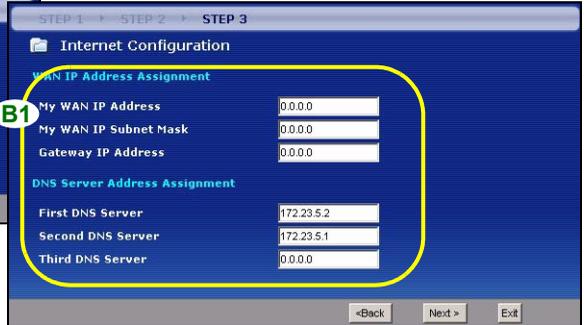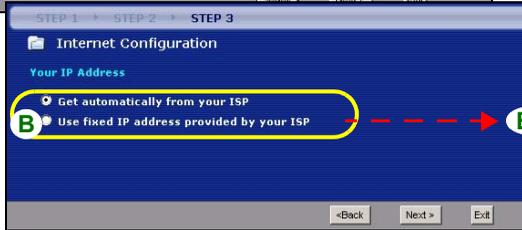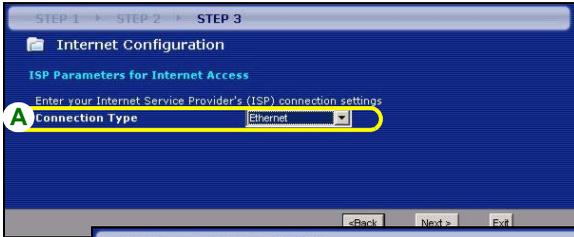

PPPoE Connection

A Select **PPPoE** as your WAN connection type.

B Type a **Service Name** (Optional), **User Name** and **Password**.

C Select **Get automatically from your ISP** if your ISP did not assign you a fixed IP address. Skip to **D**.

Or





Select **Use fixed IP address provided by your ISP** to give the P-2302HW/HWL-P1 a fixed, unique IP address. Go to **C1**.

C1 If you select **Use fixed IP address provided by your ISP**, enter a WAN IP address, WAN IP Subnet Mask and the neighboring device's IP address given by your ISP.

If you were given DNS server settings, enter them in the fields. Otherwise leave the default settings and just click **Next**.

D Select **Factory Default** to use the factory assigned default MAC address. Click **Apply** to save your changes. The OTIST in Progress screen appears if you enable OTIST in the previous wizard screen. Wait for the P-2302HW/HWL-P1 to finish transferring OTIST settings.

E Click **Finish** to complete the wizard.

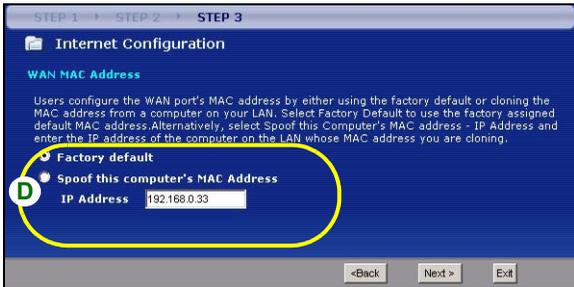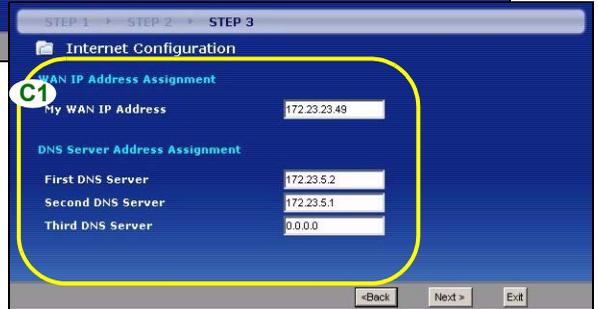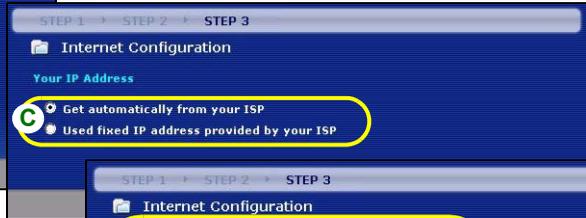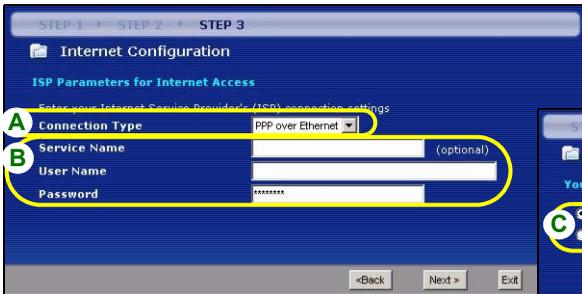

3 Configure VoIP

Click **VOIP SETUP**.

Note: You should have the information provided by your VoIP service provider.

Enter the information provided by your VoIP service provider. Keep the default settings if your VoIP service provider did not provide some information. If you have a SIP account like **1234567@VoIP-provider.com**, the **SIP Number** is **1234567**, and the **SIP Service Domain** is **VoIP-provider.com**. When you are done, the **PHONE** light should be on. Close the wizard.



3.1 Regular Phone Line Setup (P-2302HWL-P1 only)

When one of your VoIP accounts is registered, the P-2302HWL-P1 normally uses the Internet (not the regular phone line) to make phone calls. Follow the directions in this section to make sure you can also use the regular phone line while one of your VoIP accounts is registered.

Note: When the P-2302HW/HWL-P1 does not have power, only the phone connected to the **PHONE 1** port can be used for making calls. Ensure you know which phone this is, so that in case of emergency you can make outgoing calls.

In the main screen, click **VoIP > PSTN Line**.

PSTN Line Pre-fix Number: Enter 1 - 7 numbers you dial before you dial the phone number, if you want to make a regular phone call while one of your SIP accounts is registered. These numbers tell the P-2302HW/HWL-P1 that you want to make a regular phone call.

Relay to PSTN Line: Enter phone numbers for regular phone calls (that do not use the Internet) that you always want to dial without the prefix number. For example, enter emergency phone numbers here.

Click **Apply**.

The screenshot shows a web interface window titled 'General' with a sub-header 'Call through PSTN Line'. There is a text input field for 'PSTN Line Pre-fix Number' containing the value '0000'. Below this is a section titled 'Relay to PSTN Line' which contains a vertical list of nine numbered input fields (1 through 9). At the bottom of the window, there are two buttons: 'Apply' and 'Reset'.

3.2 Make Phone Calls

Follow these directions to make calls over the Internet.

- If you want to dial a SIP number that only uses numbers (for example, “12345”), dial the number on your phone’s keypad. You can also set up a speed-dial entry, if you want. See the User’s Guide for instructions.
- If you want to dial a SIP number that uses letters or if you want to make a peer-to-peer call, set up a speed-dial entry first. See the User’s Guide for instructions. Then, dial the speed-dial number to make the call.
- If you want to call regular telephone numbers, use your VoIP service provider’s dialing plan.

For the P-2302HWL-P1, follow these directions to make phone calls that do not use the Internet.

- If you set up the phone number in the **Relay to PSTN** section (Section 3.1), just dial the phone number.
- If the **PHONE** light is off, just dial the phone number.
- Otherwise, first dial the prefix you set in Section 3.1, and then dial the phone number.


Follow these directions to call the phone that is connected to the P-2302HW/HWL-P1.

- (P-2302HW-P1) Use your VoIP service provider’s dialing plan. The P-2302HW-P1 must be on.
- (P-2302HWL-P1) Use your VoIP service provider’s dialing plan, or just dial the phone number.


3.3 VoIP Trunking Overview

VoIP trunking connects an IP network (like the Internet) and the Public Switched Telephone Network (PSTN). PSTN includes the world's circuit-switched telephone network which is composed of fixed and mobile telephones. VoIP trunking allows you to create VoIP links which PSTN (Public Switched Telephone Network) callers can use to:

- Make phone calls via the Internet - Make a PSTN call to the P-2302HW/HWL-P1 and it forwards the call to any SIP based VoIP phone. In the example below, we call the P-2302HW/HWL-P1 (B) from a regular phone (A), the P-2302HW/HWL-P1 then forwards the call to a VoIP phone (C).

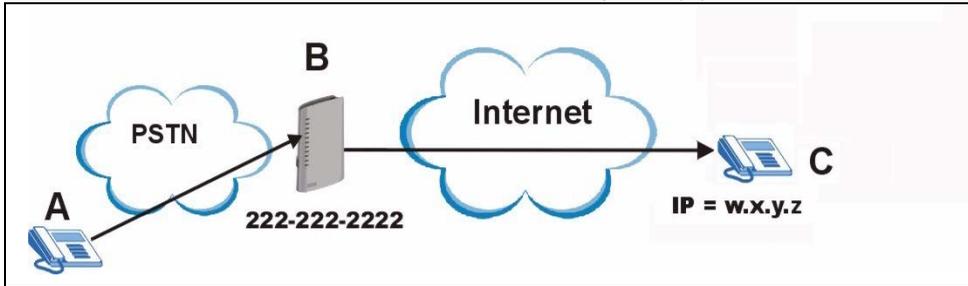

- Save on long distance calls - The P-2302HW/HWL-P1 creates a VoIP link which can be used to connect to a PSTN phone in another country, province, region and so on. Below is an example of a VoIP trunking call. A calls the P-2302HW/HWL-P1 (B), B makes a VoIP connection to another VoIP trunking device C and C forwards the call to a PSTN phone D.

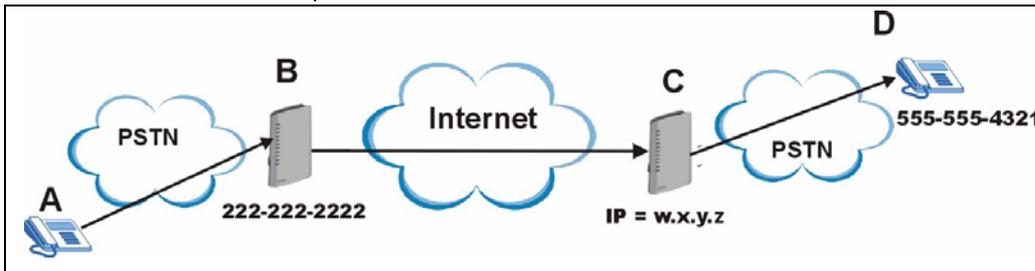

See the User's Guide for information on how to configure VoIP trunking.

Viewing Your Product's Certifications

- 1 Go to www.zyxel.com.
- 2 Select your product from the drop-down list box on the ZyXEL home page to go to that product's page.
- 3 Select the certification you wish to view from this page.